

## User's Manual



© 2099 SiTouch. All rights reserved. SiTouch, the SiTouch logo, and other SiTouch marks are owned by SiTouch and may be registered. All other trademarks are the property of their respective owners. SiTouch assumes no responsibility for any errors that may appear in any manual or on the website. Information contained herein is subject to change without notice.

## Safety Precautions

### Safety Matters



Please refer to all safety precautions covered in this user manual to prevent injury or damage.

This product contains a rechargeable lithium-ion battery. All safety precautions should be taken into consideration when handling and or operating any type of device that is powered by a battery such as this product. Do not drop, heat, crush or submerge this product in water. Do not operate this device in extreme humidity, heat or cold environments for long periods of time. Misuse of this device may cause injury and will void the device's warranty.



#### **Attention to traffic safety**

Do not operate or attempt to operate this device while driving or operating any moving vehicle.



#### **Aircraft Safety**

Please do not operate or attempt to operate this device while on board an aircraft. Doing so may cause interference to the aircrafts operations and communications devices.



#### **Combustible Agents and Chemicals**

Please turn the device off while around fuel or any combustible agents or chemicals.



#### **Turn off this device in the hospital**

Please do not operate or attempt to operate this device in a hospital. Doing so may cause interference to the medical operations and communications devices. As with all wireless devices, this product may interfere with implanted cardiac pacemakers, hearing aids and other medical implant devices.



#### **Interference**

All wireless devices may be subject to interference, thus affecting the performance of this product.



#### **Replacement parts**


Do not use any replacement parts other than those provided or recommended by the manufacturer.



Do not look directly at or point the laser at eyes. Doing so will cause permanent damage or blindness.

# Introduction

## Product overview

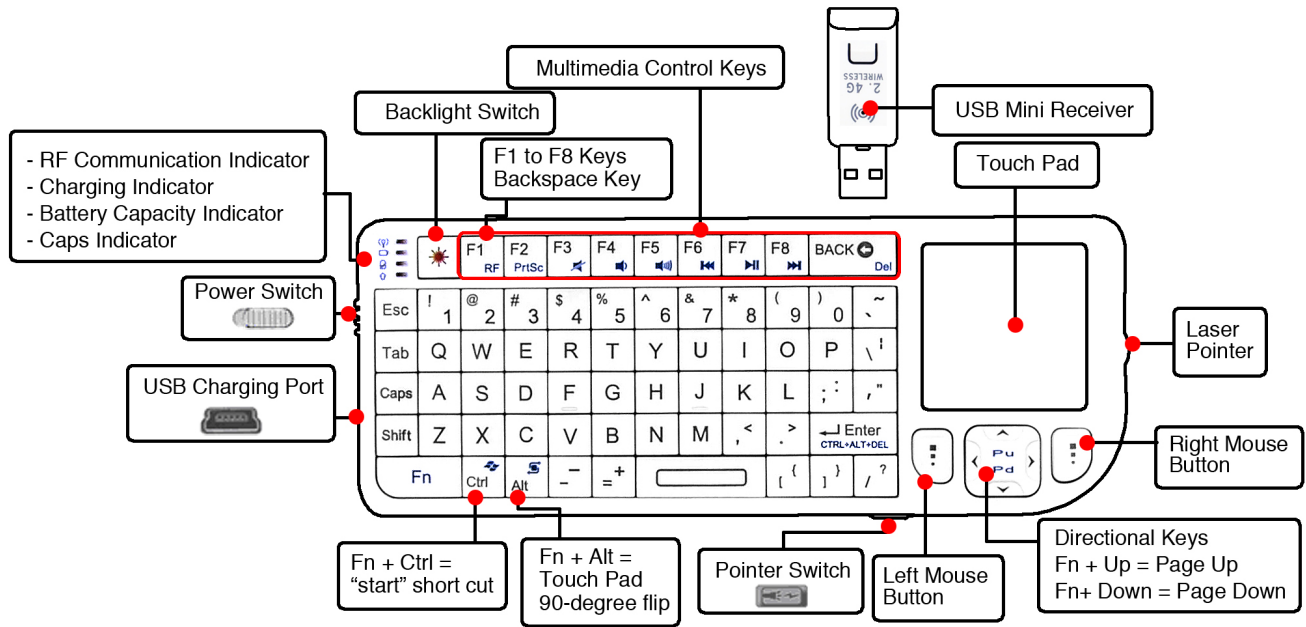


## Touchpad

The touchpad can be used in a horizontal or vertical position. To switch between horizontal or vertical mode, hold the Fn key and hit the Alt key.



## Wireless 2.4G receiver

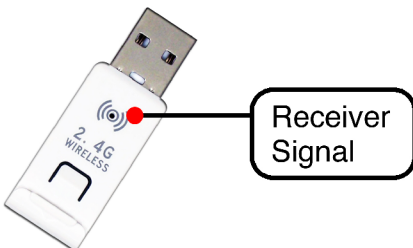

## **Connecting the receiver**

Slide the receiver out from the side of keyboard, and insert to the devices with a standard USB interface. Once connected, slide the power switch to the "ON" position located on the left side of the unit to establish the connection.

## **Enabling the backlight**

Once the keyboard has established a connection to the receiver, the backlight keys will automatically turn on for 3 seconds. The backlight will turn off after 3 seconds to preserve battery life. To manually turn the backlight on, simply press the key specified above in the diagram.

## **Auto sleep and wake feature**

The keyboard also features an auto sleep and auto wake mode. If there is a long period of inactivity, the keyboard will automatically go into a sleep mode. During the sleep mode, the user can wake the unit up by pressing any key. The 2.4 GHz receiver and keyboard's RF indicator will continue to flash and will not power down.

## **Charging the battery**

The device with built-in lithium-ion battery, please use only approved data lines and chargers.

**Note:** Fully charge the unit before operating for the first time. This device can be used when charging, but will extend the charging time;

When the battery is low, the low-voltage light will flash to warn the user. The unit will automatically turn off if the battery has been depleted.

## **Basic functions**

### **RF matching**

The device has been pre-coded at the factory to match a keyboard to the receiver. This ensures that two or more of the same device will not interfere with each other on the same wireless spectrum. In an event that this does happen, you can change channels to avoid interference by pressing the two keys FN and F1 about 10 seconds. The RF indicators will flash from slow to rapid. Once the channel has changed, the RF indicator will fall back to a slow flash confirming that the change was successful.

## Appendix

### Technical parameters

#### Specification

- Measurements (L x W x H): 151.1mm x 59mm x 13.8mm
- Weight (grams): 100g / 0.22 lbs
- Operational Range: up to 10 meters/ 30 feet
- Output power (db): +4db Max.
- Operation voltage: 3.3V
- Operation current: < 150mA
- Charging current: < 350mA
- Hibernation current: < 1mA

#### Computer system requirements

- ☞ Windows 2000
- ☞ Windows XP
- ☞ Windows Vista ,Windows CE, Windows 7
- ☞ Linux(Debian-3.1,Redhat-9.0 Ubuntu-8.10 Fedora-7.0 tested)

#### Maintenance

- ☞ Do not attempt to disassemble the device or replace rechargeable battery. Doing so will void the warranty.
- ☞ The battery will discharge if stored for a long period of time without usage.
- ☞ Use the specified charger. Disconnect the device after the battery has been fully charged. Overcharging the battery will shorten the life span of the battery.
- ☞ Do not expose the device in extreme heat or cold. Extreme temperatures will cause the life span of the battery to shorten.
- ☞ Use only a damp cloth with mild soap to clean the device. Solvents and other cleaning agents may cause damage to the device.

## Troubleshooting

Below are some basic troubleshooting scenarios for the device. Please contact support from the place of purchase if you are unable to resolve any issues with the device.

Problem	Possible issue	Solution
Unit does not respond.	<ol style="list-style-type: none"><li>1. Low battery power.</li><li>2. Unit is not turned on.</li></ol>	<ol style="list-style-type: none"><li>1. Charge the device for at least 15 minutes.</li><li>2. Check if the switch selected to the “ON” position.</li></ol>
Keyboard cannot establish a connection to the receiver.	<ol style="list-style-type: none"><li>1. The receiver may not be inserted correctly.</li><li>2. Possible wireless interference with another device.</li></ol>	<ol style="list-style-type: none"><li>1. Disconnect and reconnect the receiver to the USB port.</li><li>2. Change the channel of the device by pressing and holding the Fn+ F1 key for 10 seconds and let the unit reconnect.</li></ol>
The mouse pointer moves erratically and/or unresponsive.	<ol style="list-style-type: none"><li>1. Device may not be within optimal range of the receiver</li><li>2. Dust or oil on the touchpad.</li></ol>	<ol style="list-style-type: none"><li>1. Bring the unit closer to the receiver.</li><li>2. Clean the touchpad with a damp cloth.</li></ol>
The unit does not charge.	<ol style="list-style-type: none"><li>1. Defective battery.</li><li>2. Check connections.</li></ol>	<ol style="list-style-type: none"><li>1. Contact your local dealer for replacements.</li><li>2. Verify if the device is securely connected to the charger.</li></ol>

## Packing list

This equipment package contains the following items:

Wireless Keyboard	1 unit
Wireless receiver	1 unit
USB-A to Mini-B Charge only Cable	1 unit
User Manual	1 unit